




Where to Install the Supply Air Sensor

1 Vertical Configuration

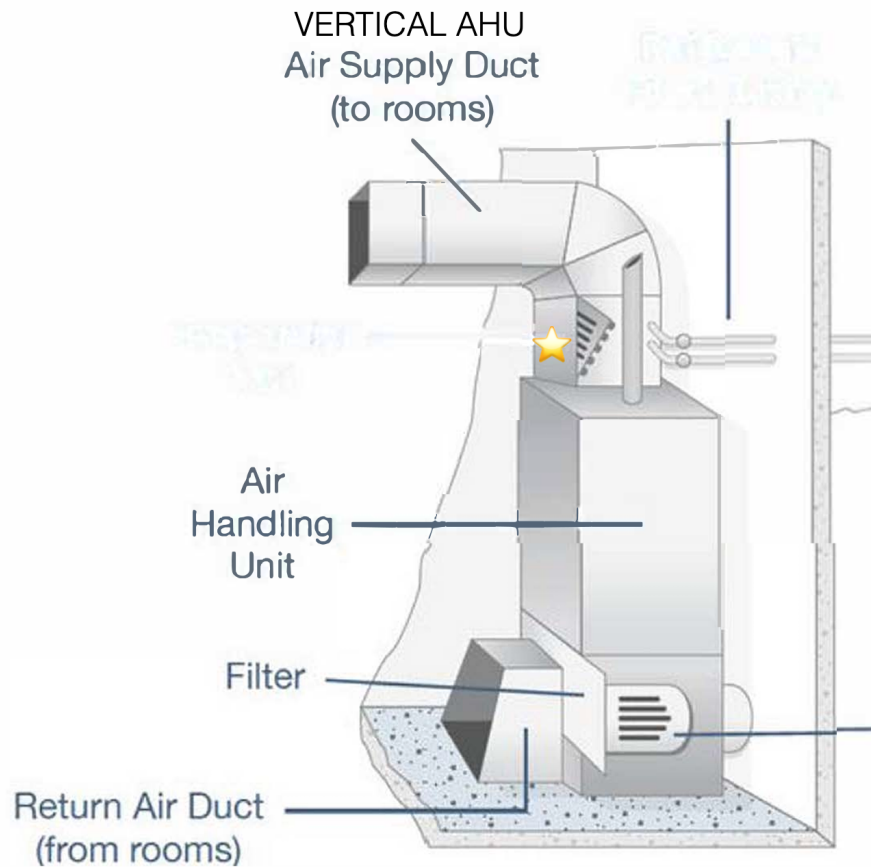


★ This is where you should install your supply air sensor



Where to Install the Supply Air Sensor

2

Horizontal Configuration

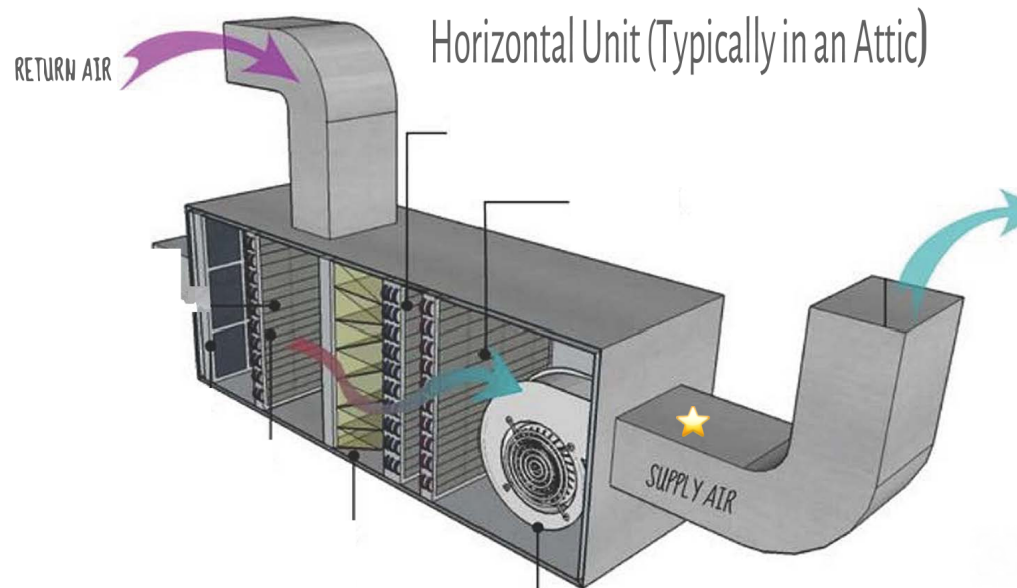

★ This is where you should install your supply air sensor